


Instructions for Changing Straps


1. Using a hammer and a blunt end punch - knock out pin that holds retainer triangle.
2. Remove 4 nuts that secure mounting bracket to ski. Then remove mounting bracket. Rotate mounting bracket to remove from strap.
3. Remove nuts and bolts from ski tip.

*Re-assemble in opposite order. To re-insert pin, use hammer only.

*Straps do NOT need to be heated prior to installation.

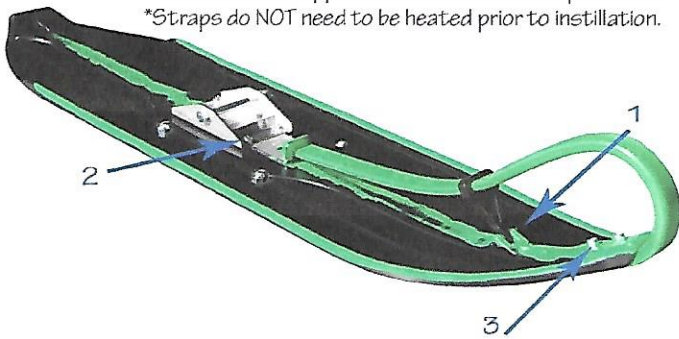

Procedure for Ski alignment

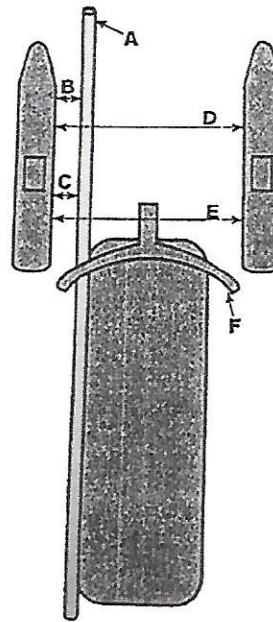

1. Place sled on flat surface.
2. Place a straight pole (A), pipe or board along side of track extending to front of skis.
3. Position handle bars (F) in straight forward position with sled.
4. Measure and adjust distances B&C to dead even. (this aligns left ski with pole & track).
5. Measure and adjust distances D&E to dead even. (this aligns right ski with left ski).
6. Slight 'toe-out' (1/8"-1/4") is acceptable to take up play of worn steering linkage. DO NOT toe-in.
7. Ride to your hearts content!

**Sun
Ruins
Plastic!!**

Do not store snowmobile in sun without covering skis for any length of time. Do not cover with tarps, as they will literally "bake" the moisture out of the skis.



Like us on Facebook!
www.facebook.com/simmonsflexiskis

Warranty

Simmons Flexi-Ski is warranted against defects in materials or workmanship for two years from the date of purchase. Sun damage, abuse or normal wear are not covered by warranty policy. Not designed for off-snow uses: avoid rocks, asphalt, etc.

Stay Cool.

the **SIMMONS COOLING FIN™**



Travel at any speed without worrying about your track seizing to the slide rails. Attach the Cooling Fin onto the second bolt of your Simmons Flexi-Ski and eliminate the need for periodic stopping to throw snow on the slide rails.

\$ 17.93 per set

\$ 31.50 per set



SIMMONS FLEXI-SKI
Control.

**SIMMONS
Wings™**

The Simmons Wings are designed to assist with turning in powder and heavy snow by adding additional surface area to the side of the Simmons Flexi-Ski.